























 



 

















 



 



 



 



 



 







Original	Rechange	Original	Rechange
 Power	 Power	 CH/Track-	 CH- / Page-
 Input	 AV / Input / RDS	 Rec	 Rec / Rec Mode
 Preset	 Smart / List	 Pause/Still	 Pause / Step / Freeze
 Clear	 Exit / Cancel / Clear	 Play	 Play / Slow
 1	 1	 Stop	 Stop / Hold
 2	 2	 >>	 >> / Tune+
 3	 3	 <<	 << / Tune-
 4	 4	 Slow	 Shift + Play /
 5	 5	 x2	 D.Menu / Top
 6	 6	 Menu/Tv	 Menu / Home
 7	 7	 Type	 Setup / OPT /
 8	 8	 Tv/VCR	 TV/Radio /
 9	 9	 Display	 Display / Media
 0	 0	 SP/LP	 Picture / Format
 OK	 OK	 Reset	 Text / Goto
 Index	 Info / Angle	 Memory	 Fav / Marker / PC
 CH/Track+	 CH+ / Page+	 VPS/PDC	 Subtitle / EQ





Original

Rechange

Original	Rechange
 Audio	 Audio / Lang I/II

Original

Rechange

Original	Rechange

