



Original		Recharge		Original		Recharge	
	Power		Power		0/--		0
	Main Menu		Menu / Home		AV		AV / Input / RDS
	Tape		Shift + 5		0000		Back / Return
	Programme		Setup / OPT /		SP/LP		Picture / Format
	MEM		Display / Media		<<		<< / Tune-
	Exit/Status		Exit / Cancel / Clear		Play		Play / Slow
	Programme		CH+ / Page+		>>		>> / Tune+
	Programme		CH- / Page-		Rec		Rec / Rec Mode
	1		1		Stop		Stop / Hold
	2		2		Pause		Pause / Step / Freeze
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				

