


 
 







 
 

 
 












	Original	Rechange
	Open/Close	 Eject / Surround
	Power	 Power
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	10+	 Shift + Guide / EPG / -/--
	Display	 Display / Media
	Mute	 Mute / Dimmer
	Title/TTX	 Text / Goto
	Menu	 Menu / Home

	Original	Rechange
	Prog/EPG	 Guide / EPG / -/--
	PBC	 Shift + 0
	Goto	 Shift + Text /
	Vol-	 Vol-
	Vol+	 Vol+
	Pause	 Pause / Step / Freeze
	Play	 Play / Slow
	Stop	 Stop / Hold
	Setup	 Setup / OPT /
	Return	 Back / Return
	Source	 AV / Input / RDS
	Tv/Radio	 TV/Radio /
	Up	 Up
	Down	 Down
	FAV-	 CH- / Page-
	Left	 Left
	Right	 Right





Original	Recharge
 FAV+	 CH+ / Page+
 Enter	 OK
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 3D	 Picture / Format
 Subtitle	 Subtitle / EQ
 Zoom	 Zoom / Size
 Mode	 Shift + Display / Media
 Digest	 Sound / Title
 Language	 Audio / Lang I/II
 L/R	 Red / Netflix / Search
 P/N	 Sleep / Timer
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Angle	 Info / Angle

Original	Recharge
 Slow	 Shift + Play /

