




 

 



 













 











Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 Setup	 Setup / OPT /
 Zoom	 Zoom / Size
 Rotate	 Picture / Format
 Info	 Info / Angle
 Repeat	 Shift + Green / APP / REPEAT
 Goto	 Text / Goto
 Edit	 D.Menu / Top
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Browser	 AV / Input / RDS
 Movie	 TV/Radio /
 Photo	 Smart / List
 Music	 Sound / Title
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Recharge
 Stop	 Stop / Hold
 Home	 Menu / Home
 Return	 Back / Return
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 >>	 >> / Preset+
 Vol-	 Vol-
 <<	 << / Preset-
 1	 1
 2	 2
 3	 3
 >>	 >> / Tune+
 4	 4





	Original	Recharge	Original	Recharge
5	5	TAPE 5		
6	6	TUNER 6		
FR ◀	<<	TUNE- ◀		<< / Tune-
7	7	AUX - HDD 7		
8	8	USB 8		
9	9	BLUETOOTH 9		
0	0	HDMI - SAT 0		
HDMI ■	Red/HDMI	NETFLIX SEARCH		Red / Netflix / Search
AV ■	Blue/AV	Prime Video RANDOM		Blue / Prime Video / Random
COPY ■	Green/Copy	APP REPEAT		Green / APP / Repeat
■	Yellow	YouTube REPEAT A-B		Yellow / YouTube / Repeat

