



Original	Rechange		
	Standby		Power
	TV/VCR		Smart / List
	TXT		Text / Goto
	Mute		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	Info		Info / Angle
	EPG		Guide / EPG / -/-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Source		AV / Input / RDS
	Tv/Rad		TV/Radio /
	Up		Up
	CH+		CH+ / Page+

Original	Rechange		
	Down		Down
	CH-		CH- / Page-
	Left/FAV-		Left
	Right/FAV+		Right
	Enter		OK
	←		Back / Return
	HH:MM		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Original	Recharge
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Fav	 Fav / Marker / PC
 RGB	 Setup / OPT /
 Audio	 Audio / Lang I/II
 Lang	 Shift + Audio / Lang I/II
 Red/Repeat	 Red / Netflix / Search
 Green/A-B	 Green / APP / Repeat
 Yellow/Zoom	 Yellow / YouTube / Repeat
 Blue/Subtitle	 Blue / Prime Video / Random

Original	Recharge

