



 

 



 



 

 





 

 

 

 

 

 





Original	Rechange
 Power	 Power
 Open/Close	 Eject / Surround
 Preset/Folder Up	 CH+ / Page+
 Function	 Display / Media
 Vol+	 Vol+
 Preset/Folder	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Program/Memor	 TV/Radio /
 USB Rec	 Rec / Rec Mode
 I<< / Tuning- / Left	 << / Tune-
 I<< / Tuning- / Left	 I<< / Preset-
 I<< / Tuning- / Left	 Left
 Repeat (Menu) /	 Green / APP / Repeat
 Repeat (Menu) /	 Up
 Repeat (Menu) /	 Menu / Home
 >>I / Tuning+ / Right	 >>I / Preset+

Original	Rechange
 >>I / Tuning+ / Right	 >> / Tune+
 >>I / Tuning+ / Right	 Right
 Stop / Enter	 Stop / Hold
 Stop / Enter	 OK
 Play/Pause /	 Play / Slow
 Play/Pause /	 Pause / Step / Freeze
 Play/Pause /	 Down
 Sound Effect	 Sound / Title
 Auto DJ	 Smart / List
 Delete	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7





Original		Recharge	
8	8	8	8
9	9	9	9
INFO	Info	INFO	Info / Angle
0	0	0	0
SLEEP	Sleep	SLEEP	Sleep / Timer
RDS	RDS	YouTube REPEAT A-B	Yellow / YouTube / Repeat
PTY	PTY	Prime Video RANDOM	Blue / Prime Video / Random

Original		Recharge	

