 



 




 


 



 
 



 
 

 



 






 

 
 







 


 
 








 












	Original	Rechange		Original	Rechange
	Power		Power		Input
	Mute		Mute / Dimmer		Info
	1		1		Menu
	2		2		Exit
	3		3		Up
	4		4		Down
	5		5		Right
	6		6		Left
	7		7		OK
	8		8		Vol+
	9		9		Vol-
	0		0		FAV
	Recall		Shift + Guide / EPG / -/--		P.Mode
	Back / Return		Back / Return		S.Mode
	Sleep		Sleep / Timer		CH+ / Page+
	Audio		Audio / Lang I/II		CH- / Page-
	Aspect		Shift + Picture / Format		Red
					AV / Input / RDS
					Info / Angle
					Menu / Home
					Exit / Cancel / Clear
					Up
					Down
					Right
					Left
					OK
					Vol+
					Vol-
					Fav / Marker / PC
					Picture / Format
					Sound / Title
					CH+ / Page+
					CH- / Page-
					Red / Netflix / Search



