



Original	Recharge
Function	Power
Eject	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Channel Up	CH+ / Page+
Channel Down	CH- / Page-
Slow	Shift + Play /
Menu	Menu / Home
Display	Display / Media

Original	Recharge
Tape Counter	Setup / OPT /
Tape Counter	TV/Radio /
REW	<< / Tune-
Left	Left
Play	Play / Slow
Up	Up
Right	Right
F.FWD	>> / Tune+
Down	Down
Stop	Stop / Hold
Record	Rec / Rec Mode
Speed	Smart / List
Pause/Still	Pause / Step / Freeze
Quick-Find	Red / Netflix / Search
Time Search	Green / APP / Repeat
Index Search	Yellow / YouTube / Repeat

