 

 

 







 

 









 



 



 



 







 



 

 

 

 





 

 



 





Original	Rechange	Original	Rechange
 Power	 Power	 >>	 >> / Tune+
 Open/Close	 Eject / Surround	 >>	 >> / Preset+
 Radio & Input	 TV/Radio /	 Stop	 Stop / Hold
 1	 1	 Play	 Play / Slow
 2	 2	 Pause	 Pause / Step / Freeze
 3	 3	 Speaker Level	 Subtitle / EQ
 4	 4	 Vol+	 Vol+
 5	 5	 Optical	 Setup / OPT /
 6	 6	 Sound Effect	 Sound / Title
 7	 7	 Vol-	 Vol-
 8	 8	 Mute	 Mute / Dimmer
 9	 9	 Home	 Menu / Home
 Clear	 Exit / Cancel / Clear	 Music ID	 Audio / Lang I/II
 0	 0	 Info/Display	 Info / Angle
 Repeat	 Shift + Green / APP /	 Up/Preset Up	 Up
 I<<	 I<< / Preset-	 Left/Tuning-	 Left
 <<	 << / Tune-	 Enter	 OK





Original	Recharge
Right/Tuning+	Right
Down/Preset	Down
Back	Back / Return
Title/Pop Up	Display / Media
Disc Menu	D.Menu / Top
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue/Mono/Stereo	Blue / Prime Video / Random
Marker	Fav / Marker / PC
Search	Shift + Red / Netflix / Search
Sleep	Sleep / Timer
Rec	Rec / Rec Mode
Power Tv	Shift + Power
Vol+ Tv	Shift + Vol+
PR/CH+ Tv	CH+ / Page+
AV Input Tv	AV / Input / RDS

Original	Recharge
Vol- Tv	Shift + Vol-
PR/CH- Tv	CH- / Page-

