

 





























 





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Smart Tv	 Smart / List
 0	 0
 Guide	 Guide / EPG / -/--
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up

Original	Rechange
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Info	 Info / Angle
 P+	 CH+ / Page+
 Vol-	 Vol-
 Option	 Setup / OPT /
 P-	 CH- / Page-
 TV	 TV/Radio /
 Audio	 Audio / Lang I/II
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 List	 Shift + Smart / List





Original	Recharge
Rec	Rec / Rec Mode
Stop	Stop / Hold
PRE-CH	Fav / Marker / PC
<<	<< / Tune-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>	>> / Tune+
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Recharge

