



| Original | Rechange | Original | Rechange |
|----------------|------------------|-------------|-----------------------|
| Power | Power | Angle/Audio | Audio / Lang I/II |
| Open/Close | Eject / Surround | Angle/Audio | Info / Angle |
| 1 | 1 | Prog/Repeat | Green / APP / Repeat |
| 2 | 2 | Prog/Repeat | TV/Radio / |
| 3 | 3 | Setup | Setup / OPT / |
| 4 | 4 | Stop | Stop / Hold |
| 5 | 5 | Play | Play / Slow |
| 6 | 6 | Pause | Pause / Step / Freeze |
| 7 | 7 | Left | Left |
| 8 | 8 | Up | Up |
| 9 | 9 | Right | Right |
| Menu/Zoom | Zoom / Size | OK | OK |
| Menu/Zoom | Menu / Home | Down | Down |
| 0 | 0 | << | << / Tune- |
| USB | + 8 Shift + 8 | >> | >> / Tune+ |
| Title/Subtitle | Sound / Title | Vol+ | Vol+ |
| Title/Subtitle | Subtitle / EQ | I<< | I<< / Preset- |

| Original | Rechange | Original | Rechange |
|-------------|----------------------|-------------|-----------------------|
| Angle/Audio | Audio / Lang I/II | Angle/Audio | Info / Angle |
| Prog/Repeat | Green / APP / Repeat | Prog/Repeat | TV/Radio / |
| Setup | Setup / OPT / | Stop | Stop / Hold |
| Play | Play / Slow | Pause | Pause / Step / Freeze |
| Left | Left | Up | Up |
| Right | Right | OK | OK |
| Down | Down | << | << / Tune- |
| >> | >> / Tune+ | Vol+ | Vol+ |
| I<< | I<< / Preset- | | |



