



Original	Rechange
Power	Power
Eject	Eject / Surround
Up	Up
Right	Right
Clear	Exit / Cancel / Clear
Left	Left
Down	Down
OK / Clk/Cnt	OK
i	Info / Angle
Pause/Still	Pause / Step / Freeze
FF	>> / Tune+
REW	<< / Tune-
Play	Play / Slow
Stop	Stop / Hold
Rec ITR	Rec / Rec Mode
1	1
2	2

Original	Rechange
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV/VCR	Smart / List
0	0
CM Skip	Fav / Marker / PC
ShowView / Video Plus+	Display / Media
LP	Menu / Home
AV	AV / Input / RDS
C.Lock	D.Menu / Top
ez POWER OFF	Red / Netflix / Search
ez REPEAT	Green / APP / Repeat

