



Original	Rechange
Power	Power
Tv/Video	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Recall	Back / Return
0	0
-/--	Guide / EPG / -/--
Vol-	Vol-
Vol-	Left
CH+	CH+ / Page+

Original	Rechange
CH+	Up
Vol+	Vol+
Vol+	Right
CH-	CH- / Page-
CH-	Down
Menu	Menu / Home
Mute	Mute / Dimmer
[ * ]	Picture / Format
Lock	Display / Media

