















 



















 



 































Original		Rechange		Original		Rechange	
	Input		AV / Input / RDS		Menu		Menu / Home
	Power		Power		[≡i]/Index		Display / Media
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		EPG		Guide / EPG / -/--
	6		6		Vol+		Vol+
	7		7		Mute		Mute / Dimmer
	8		8		P+		CH+ / Page+
	9		9		Vol-		Vol-
	Pro. List		Smart / List		I/II		Audio / Lang I/II
	0		0		P-		CH- / Page-
	Last		Back / Return		Red		Red / Netflix / Search
	Info		Info / Angle		Green		Green / APP / Repeat
	[≡?]/Reveal		Play / Slow		Yellow		Yellow / YouTube / Repeat
	Up		Up		Blue		Blue / Prime Video / Random





Original		Recharge		Original		Recharge	
	Text		Text / Goto				
	[/≡]/Mix		Rec / Rec Mode				
	[≡B]/Subtitle		Subtitle / EQ				
	*/Freeze		Pause / Step / Freeze				
	[<>]/Aspect		Setup / OPT /				
	Sleep		Sleep / Timer				
	♥/FAV		Fav / Marker / PC				

