


 






 



 
 











Original	Recharge
 Sleep	 Sleep / Timer
 Clock	 Shift + Sleep / Timer
 Dimmer	 Shift + Mute / Dimmer
 Power	 Power
 Internet Radio	 TV/Radio /
 AUX	 Shift + 7
 Music Server	 Sound / Title
 Bluetooth	 Shift + 9
 iPod/USB	 Shift + 8
 I<</CH-	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>/CH+	 >>/ Preset+
 ADD Favorites	 CH+ / Page+
 SDB Tone	 Audio / Lang I/II
 Volume+	 Vol+
 Call Favorites	 CH- / Page-

Original	Recharge
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Top Menu	 D.Menu / Top
 Info	 Info / Angle
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Search	 Red / Netflix / Search
 Down	 Down
 Setup	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original		Rechange		Original		Rechange	
7 PORS	7	AUX - HDD 7	7				
8 TUV	8	USB 8	8				
9 WXYZ	9	BLUETOOTH 9	9				
+10 $\frac{a}{A}$	+10	GUIDE EPG	Guide / EPG / -/--				
0 $\frac{\cdot}{\cdot}$	0	HDMI - BAT 0	0				
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear				
RANDOM	Random	Prime Video RANDOM	Blue / Prime Video / Random				
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat				
MODE	Mode	FORMAT PICTURE	Picture / Format				

