





 








 



 










 



 













Original		Recharge		Original		Recharge	
	Power		Power		Stop		Stop / Hold
	Vol+		Vol+		123#		1
	Home		Menu / Home		prime video		Blue / Prime Video / Random
	P+		CH+ / Page+		Netflix		Red / Netflix / Search
	Vol-		Vol-		FPay		Yellow / YouTube / Repeat
	P-		CH- / Page-				
	Guide		Guide / EPG / -/--				
	Input		AV / Input / RDS				
	Up		Up				
	Left		Left				
	OK		OK				
	Right		Right				
	Back		Back / Return				
	Down		Down				
	Exit		Exit / Cancel / Clear				
	Smart Colors		Smart / List				
	Play		Play / Slow				

