



Original		Rechange		Original		Rechange	
	Power		Power		i		Info / Angle
	1		1		TXT		Text / Goto
	2		2		AUX		Shift + 7
	3		3		Blue / R		Blue / Prime Video / Random
	*+		>>I / Preset+		Up		Up
	4		4		P+		CH+ / Page+
	5		5		Right		Right
	6		6		Vol+		Vol+
	-*		I<< / Preset-		Yellow		Yellow / YouTube / Repeat
	7		7		OK		OK
	8		8		Green/Timer		Sleep / Timer
	9		9		Green/Timer		Green / APP / Repeat
	O+		>> / Tune+		Left		Left
	-O		<< / Tune-		Vol-		Vol-
	0/AV		AV / Input / RDS		Down		Down
	0/AV		0		P-		CH- / Page-
	P/C-ATS		Display / Media		Red		Red / Netflix / Search





	Original	Recharge	Original	Recharge
	Audio / Mute		Mute / Dimmer	
	Audio / Mute		Audio / Lang I/II	



 



 

 



 

 



















 



 



 





 



 



 















Original		Rechange		Original		Rechange	
	Power		Power				
	<		Left				
	>		Right				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Stop		Stop / Hold				
	Rec		Rec / Rec Mode				
	P+		CH+ / Page+				
	P-		CH- / Page-				









Original		Rechange		Original		Rechange	
	Power		Power		i		Info / Angle
	1		1		TXT		Text / Goto
	2		2		AUX		Shift + 7
	3		3		Blue / R		Blue / Prime Video / Random
	*+		>>I / Preset+		P+		CH+ / Page+
	4		4		Up		Up
	5		5		Right		Right
	6		6		Vol+		Vol+
	-*		I<< / Preset-		Yellow		Yellow / YouTube / Repeat
	7		7		OK		OK
	8		8		Green/Timer		Green / APP / Repeat
	9		9		Green/Timer		Sleep / Timer
	O+		>> / Tune+		Left		Left
	-O		<< / Tune-		Vol-		Vol-
	0/AV		AV / Input / RDS		P-		CH- / Page-
	0/AV		0		Down		Down
	P/C-ATS		Display / Media		Red		Red / Netflix / Search





	Original	Rechange	
	Audio / Mute	 Mute / Dimmer	
	Audio / Mute	 Audio / Lang I/II	

	Original	Rechange

