



































| Original | Recharge |
|--|---|
|  Standby |  Power |
|  Open / Close |  Eject / Surround |
|  Prog |  TV/Radio / |
|  Shuffle |  Blue / Prime Video / Random |
|  Repeat |  Green / APP / Repeat |
|  A-B |  Yellow / YouTube / Repeat |
|  Title |  Shift + Title / Sound / Title |
|  Display |  Display / Media |
|  Zoom |  Zoom / Size |
|  Menu |  Menu / Home |
|  Setup |  Setup / OPT / |
|  Return |  Back / Return |
|  Up |  Up |
|  Left / AM |  Left |
|  Select |  OK |
|  Right / FM |  Right |
|  Down |  Down |

| Original | Recharge |
|--|--|
|  Play/Pause |  Play / Slow |
|  Stop |  Stop / Hold |
|  I<< Skip / Tune- |  I<< / Preset- |
|  I<< Skip / Tune- |  Shift + I<< / Preset- |
|  Skip >>I / Tune+ |  >>I / Preset+ |
|  Skip >>I / Tune+ |  Shift + Skip >>I / Preset+ |
|  << Search |  << / Tune- |
|  Search >> |  >> / Tune+ |
|  Volume+ |  Vol+ |
|  Speaker |  D.Menu / Top |
|  Test Tone |  Text / Goto |
|  Volume- |  Vol- |
|  Mute |  Mute / Dimmer |
|  Sound Effects |  Sound / Title |
|  Subtitle |  Subtitle / EQ |
|  Mode |  Smart / List |
|  Audio |  Audio / Lang I/II |



