
















 




 












Original	Recharge
TIMER Timer	SHIFT + TIMER SLEEP Shift + Sleep / Timer
SLEEP Sleep	TIMER SLEEP Sleep / Timer
MONO TUNER Mono Tuner	MEDIA DISPLAY Display / Media
CLOCK Clock	OPT-TOOLS SETUP Setup / OPT /
CD EDIT/CHECK CD Edit/Check	LIST SMART Smart / List
PRGM PRGM	PROGRAM TV/RADIO TV/Radio /
RANDOM/REPEAT Random/Repeat	SHIFT + APP REPEAT Shift + Green / APP /
RANDOM/REPEAT Random/Repeat	SHIFT + Prime Video RANDOM Shift + Blue / Prime /
1 1	TV 1 1
2 2	DVD 2 2
3 3	CD - STB 3 3
DECK1/2 TAPE Tape/Deck1/2	NETFLIX SEARCH Red / Netflix / Search
4 4	VIDEO 4 4
5 5	TAPE 5 5
6 6	TUNER 6 6
BAND TUNER Tuner/Band	APP REPEAT Green / APP / Repeat
7 7	AUX - HDD 7 7


Original	Recharge
8 8	USB 8 8
9 9	BLUETOOTH 9 9
AUX VIDEO Video/AUX	YouTube REPEAT A-B Yellow / YouTube / Repeat
0 0	HDMI - BAT 0 0
+10 +10	GUIDE EPG Guide / EPG / -/-
CD CD	Prime Video RANDOM Blue / Prime Video / Random
Disc Direct Play 1	SHIFT + TV 1 Shift + 1
Disc Direct Play 2	SHIFT + DVD 2 Shift + 2
Disc Direct Play 3	SHIFT + CD - STB 3 Shift + 3
Disc Direct Play 4	SHIFT + VIDEO 4 Shift + 4
Disc Direct Play 5	SHIFT + TAPE 5 Shift + 5
Disc Direct Play 6	SHIFT + TUNER 6 Shift + 6
Disc Direct Play 7	SHIFT + AUX - HDD 7 Shift + 7
SURROUND Surround	SHIFT + SURROUND Shift + Eject / Surround
MANUAL SELECT Manual Select	OK OK
DOLBY PRO LOGIC Dolby Pro Logic	TITLE SOUND Sound / Title
T-BASS T-Bass	LANG I/II AUDIO Audio / Lang I/II





Original	Rechange
 GEQ	 Subtitle / EQ
 Karaoke	 Info / Angle
 Open/Close	 Eject / Surround
 Rec/Rec Mute	 Rec / Rec Mode
 Play / Up /	 Play / Slow
 Play / Up /	 Shift + >> / Preset+
 Play / Up /	 Up
 Vol+	 Vol+
 Pause / Set	 Pause / Step / Freeze
 << / I<< / Left / Tuning Down	 Left
 << / I<< / Left / Tuning Down	 << / Tune-
 << / I<< / Left / Tuning Down	 I<< / Preset-
 << / I<< / Left / Tuning Down	 Shift + << /
 >> / >>I / Right / Tuning Up	 Right
 >> / >>I / Right / Tuning Up	 >> / Tune+
 >> / >>I / Right / Tuning Up	 >>I / Preset+
 >> / >>I / Right / Tuning Up	 Shift + >> /

Tune+

Original	Rechange
 Vol-	 Vol-
 Power	 Power
 Stop / Down / Clear / Preset-	 Down
 Stop / Down / Clear / Preset-	 Stop / Hold
 Stop / Down / Clear / Preset-	 Shift + I<< / Preset-
 Stop / Down / Clear / Preset-	 Exit / Cancel / Clear

