





 

 

 
























Original	Recharge	Original	Recharge
	On		Power
	Off		Shift + Power
	CH+		CH+ / Page+
	Mute		Mute / Dimmer
	Vol+		Vol+
	CH-		CH- / Page-
	Surr Mode		Smart / List
	Vol-		Vol-
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Info		Info / Angle
	Down		Down
	RTN		Back / Return
	IN 1		1
	IN 2		2
	IN 3		3
	IN 4		4
	IN 5		5
	IN 6		6
	IN 7		7
	IN 8		8
	IN 9		9
	+10		Guide / EPG / -/-
	IN 0		0
	Test		Text / Goto
	SPK A		Red / Netflix / Search
	SPK B		Green / APP / Repeat
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	Play		Play / Slow




























 





 













 







 







Original	Rechange	Original	Rechange
	>>		>> / Tune+
	Channel Volume Surr+	+	Shift + CH+ /
	Channel Volume Cent+	+	Shift + Right
	Channel Volume	+	Shift + Up
	Channel Volume Surr-	+	Shift + CH- /
	Channel Volume Cent -	+	Shift + Left
	Channel Volume	+	Shift + Down

 









 







 
 


















Original		Rechange		Original		Rechange	
	On		Power		3		3
	Off		Shift + Power		4		4
	>>		>> / Preset+		5		5
	Mute		Mute / Dimmer		6		6
	Vol+		Vol+		7		7
	<<		<< / Preset-		8		8
	Rand		Red / Netflix / Search		9		9
	Vol-		Vol-		+10		Guide / EPG / -/-
	Up		Up		0		0
	Menu		D.Menu / Top		Prog		TV/Radio /
	Left		Left		Clear		Blue / Prime Video / Random
	Enter		OK		RPT		Green / APP / Repeat
	Right		Right		Stop		Stop / Hold
	Disp		Display / Media		Pause		Pause / Step / Freeze
	Down		Down		<<		<< / Tune-
	1		1		Play		Play / Slow
	2		2		>>		>> / Tune+





Original	Recharge
 On	 Power
 Off	 Shift + Power
 Preset+	 >>I / Preset+
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Preset-	 I<< / Preset-
 Vol-	 Vol-
 Up	 Up
 Tuner Mode	 Smart / List
 Left	 Left
 Enter	 OK
 Right	 Right
 Info	 Info / Angle
 Down	 Down
 1	 1
 2	 2
 3	 3

Original	Recharge
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AM/FM/DB	 Play / Slow
 0	 0
 << Scan Tune	 << / Tune-
 Tune Scan >>	 >> / Tune+

