



 







 



 































 















 




 


 





 

 
 



 






Original		Rechange		Original		Rechange	
	Power		Power		CH+		CH+ / Page+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		Guide		Guide / EPG / -/--
	2		2		CH-		CH- / Page-
	3		3		Rec		Rec / Rec Mode
	4		4		MTS		Smart / List
	5		5		Aspect		Picture / Format
	6		6		Menu		Menu / Home
	7		7		Up		Up
	8		8		Source		AV / Input / RDS
	9		9		Left		Left
	TV/Radio		TV/Radio /		Enter		OK
	0		0		Right		Right
	Fav		Fav / Marker / PC		Exit		Exit / Cancel / Clear
	Vol+		Vol+		Down		Down
	Reclist		Setup / OPT /		Display		Display / Media
	Reclist		Shift + Smart / List		Red		Red / Netflix / Search





Original	Recharge
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Cyan	 Blue / Prime Video / Random
 << / Index	 << / Tune-
 >> / TTX	 Text / Goto
 >> / TTX	 >> / Tune+
 I<< / Sub.Pg	 I<< / Preset-
 >>I / Reveal	 >>I / Preset+
 Stop / Hold	 Stop / Hold
 Play/Pause /	 Shift + Exit / Cancel / Clear
 Play/Pause /	 Play / Slow
 Size	 Zoom / Size
 Subtitle	 Subtitle / EQ

Original	Recharge

