
 




































Original	Recharge
 Standby	 Power
 Mute	 Mute / Dimmer
 FAV	 Fav / Marker / PC
 <<	 << / Tune-
 Text	 Text / Goto
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop/Text Hold	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Sleep	 Sleep / Timer
 Subtitle	 Subtitle / EQ
 P.Mode	 Picture / Format
 Aspect	 Zoom / Size
 Audio	 Audio / Lang I/II
 Recall	 Back / Return

Original	Recharge
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Info	 Info / Angle
 Vol+	 Vol+
 S.Mode	 Sound / Title
 CH+	 CH+ / Page+
 Vol-	 Vol-





	Original	Recharge		Original	Recharge
	Tv Guide	GUIDE EPG	Guide / EPG / -/--		
	CH-	CH PAGE	CH- / Page-		
	1	TV 1	1		
	2	DVD 2	2		
	3	CD - STB 3	3		
	4	VIDEO 4	4		
	5	TAPE 5	5		
	6	TUNER 6	6		
	7	AUX - HDD 7	7		
	8	USB 8	8		
	9	BLUETOOTH 9	9		
	DTV/Radio	PROGRAM TV/RADIO	TV/Radio /		
	0	HDMI - SAT 0	0		
	USB	SHIFT + 8	Shift + 8		

