



| Original | | Rechange | | Original | | Rechange | |
|----------|----------------|----------|------------------|----------|----------|----------|-----------------------|
| | Off | | Power | | Audio | | Audio / Lang I/II |
| | ATT | | Back / Return | | Subtitle | | Subtitle / EQ |
| | Play/Pause DVD | | Play / Slow | | 1 | | 1 |
| | SRC | | AV / Input / RDS | | 2 | | 2 |
| | Mode | | Picture / Format | | 3 | | 3 |
| | I<< | | I<< / Preset- | | 4 | | 4 |
| | >>I | | >>I / Preset+ | | 5 | | 5 |
| | Sound | | Sound / Title | | 6 | | 6 |
| | Up/+ | | Up | | Vol+ | | Vol+ |
| | Left | | Left | | 7 | | 7 |
| | Enter | | OK | | 8 | | 8 |
| | Right | | Right | | 9 | | 9 |
| | System Menu | | Menu / Home | | Vol- | | Vol- |
| | List | | Smart / List | | Clear | | Exit / Cancel / Clear |
| | Down/- | | Down | | 0 | | 0 |
| | DSO | | TV/Radio / | | DSPL/PTY | | Display / Media |
| | EQ7 | | Zoom / Size | | | | |

