


Original	Rechange
Open/Close	Eject / Surround
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	Guide / EPG / -/--
0	0
T/Search	Red / Netflix / Search
EPM	Picture / Format
EAM	Sound / Title
<I Slow	CH- / Page-

Original	Rechange
Slow I>	CH+ / Page+
Angle	Info / Angle
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
I<< Skip	I<< / Preset-
<</REV	<< / Tune-
FWD/>>	>> / Tune+
Skip >>I	>>I / Preset+
Up	Up
Left	Left
Enter	OK
Right	Right
Top Menu	D.Menu / Top
Down	Down

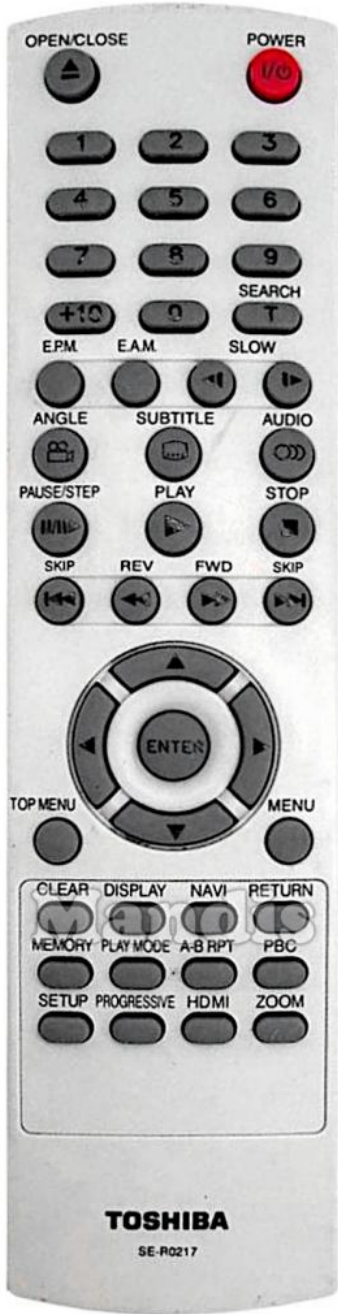



Original		Recharge		Original		Recharge	
	Menu		Menu / Home				
	Clear		Exit / Cancel / Clear				
	Display		Display / Media				
	Navi		Smart / List				
	Return		Back / Return				
	Memory		Fav / Marker / PC				
	Play Mode		Shift + Play /				
	A-B RPT		Yellow / YouTube / Repeat				
	PBC		Blue / Prime Video / Random				
	Setup		Setup / OPT /				
	Progressive		Text / Goto				
	HDMI		Shift + 0				
	HDMI		AV / Input / RDS				
	Zoom		Zoom / Size				

