

 
 
 







Original	Recharge
Power	Power
Mute	Mute / Dimmer
Red/Sub.	Red / Netflix / Search
Green/TTX	Green / APP / Repeat
Yellow/Audio	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
EPG	Guide / EPG / -/--
Info	Info / Angle
Tv/Radio	TV/Radio /
Rec	Rec / Rec Mode
DTV	Smart / List
Video	Shift + 4
Music	Audio / Lang I/II
Picture	Picture / Format
APP	Shift + Green / APP /
Setting	Setup / OPT /
Web	Display / Media

Original	Recharge
Goto	Text / Goto
Home	Shift + Menu /
Up	Up
Menu	Menu / Home
Left	Left
OK	OK
Right	Right
Back	Back / Return
Down	Down
Del	Exit / Cancel / Clear
>>	>> / Preset+
Vol+	Vol+
>>	>> / Tune+
<<	<< / Preset-
Vol-	Vol-
<<	<< / Tune-
1	1





Original		Recharge		Original		Recharge	
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	0		0				
	Stop		Stop / Hold				

