




















































 
 






Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+

Original	Rechange
 Vol-	 Vol-
 CH List	 Smart / List
 CH-	 CH- / Page-
 Netflix	 Shift + Red / Netflix /
 Home	 Menu / Home
 prime video	 Shift + Blue / Prime
 Samsung TV	 TV/Radio /
 Up	 Up
 Disney+	 Picture / Format
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Recharge	Original	Recharge
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Settings	Setup / OPT /		
Info	Info / Angle		
AD/SUBT.	Subtitle / EQ		
Stop	Stop / Hold		
<<	<< / Tune-		
I<<	I<< / Preset-		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
>>	>> / Tune+		
>>I	>>I / Preset+		

Original	Recharge

