



	Original	Recharge		Original	Recharge
	Power		Power		5
	→←		Smart / List		6
	Mute		Mute / Dimmer		7
	[ I ]		Shift + Guide / EPG / -/--		8
	Power Video		Shift + Power		9
	[ ]		Picture / Format		0
	Text		Text / Goto		-/--
	Input		AV / Input / RDS		Recall
	1		1		Red
	□ / □		Setup / OPT /		Green
	[ >   < ]		Display / Media		Yellow
	□ / □		D.Menu / Top		Blue
	↑		Zoom / Size		Up
	[ i+ ]		Info / Angle		Left
	2		2		OK
	3		3		Right
	4		4		Down





	Original	Recharge	Original	Recharge
	Vol+	Vol+		
	Vol-	Vol-		
	Menu	Menu / Home		
	<<	<< / Tune-		
	Play	Play / Slow		
	>>	>> / Tune+		
	Stop	Stop / Hold		
	Pause	Pause / Step / Freeze		
	Rec	Rec / Rec Mode		
	Progr+	CH+ / Page+		
	CH+	+  CH+ /		
	CH-	+  CH- /		
	Progr-	CH- / Page-		
	[⏰]	Sleep / Timer		







