



 



 










 
 

 





 



 







 

 



 

 

 

 

 

 
 
 


 



 






Original	Recharge	Original	Recharge
 Power	 Power	 Pause CD	 Pause / Step / Freeze
 Sleep	 Sleep / Timer	 Play CD	 Play / Slow
 Main Speakers	 Red / Netflix / Search	 Bank	 Smart / List
 Remote	 Green / APP / Repeat	 Rec Tape	 Rec / Rec Mode
 Multi/Source	 AV / Input / RDS	 Stop Tape	 Shift + Stop /
 Video 1	 1	 Disc CD	 D.Menu / Top
 Video 2	 2	 Stop CD	 Stop / Hold
 Video 3	 4	 Bank Up	 CH+ / Page+
 Tape 1	 5	 << Tape	 << / Tune-
 Source	 Shift + Vol+	 >> Tape	 >> / Tune+
 Tape 2	 8	 I<< CD	 I<< / Preset-
 Tuner	 6	 >>I CD	 >>I / Preset+
 Phono	 7	 Bank Down	 CH- / Page-
 CD	 3	 Mute	 Mute / Dimmer
 Source Volume-	 Shift + Vol-	 Test	 Text / Goto
 Pause Tape	 Shift + Pause / Step /	 Rear Volume+	 Right
 Play Tape	 Shift + Play / Slow	 Center	 Up

Slow

Original	Recharge	Original	Recharge
 Pause CD	 Pause / Step / Freeze	 Play CD	 Play / Slow
 Bank	 Smart / List	 Rec Tape	 Rec / Rec Mode
 Stop Tape	 Shift + Stop /	 Disc CD	 D.Menu / Top
 Stop CD	 Stop / Hold	 Bank Up	 CH+ / Page+
 << Tape	 << / Tune-	 >> Tape	 >> / Tune+
 I<< CD	 I<< / Preset-	 >>I CD	 >>I / Preset+
 Bank Down	 CH- / Page-	 Mute	 Mute / Dimmer
 Test	 Text / Goto	 Rear Volume+	 Right
 Center	 Up		

Volume+





	Original	Rechange	Original	Rechange
	Master	 Vol+		
	Rear Volume-	 Left		
	Center Volume-	 Down		
	Master Volume-	 Vol-		
	Mode	 Picture / Format		
	Delay	 Sound / Title		

