





 

 

 





 










 










| Original   | Rechange   |
|--|--|
|  Power      |  Power            |
|  Eject      |  Eject / Surround |
|  OTPB       |  Smart / List     |
|  Showview   |  D.Menu / Top     |
|  Tv/VCR     |  TV/Radio /       |
|  1          |  1                |
|  2          |  2                |
|  3          |  3                |
|  4          |  4                |
|  5          |  5                |
|  6         |  6               |
|  7        |  7              |
|  8        |  8              |
|  9        |  9              |
|  Channel+ |  CH+ / Page+    |
|  0        |  0              |
|  Channel- |  CH- / Page-    |

| Original  | Rechange   |
|---|--|
|  Clear       |  Exit / Cancel / Clear    |
|  Enter       |  Mute / Dimmer            |
|  Enter       |  Shift + OK               |
|  << Search   |  I<< / Preset-            |
|  Search >>   |  >>I / Preset+            |
|  Pause/Still |  Pause / Step / Freeze    |
|  Play        |  Play / Slow              |
|  Rec/OTR     |  Rec / Rec Mode           |
|  <</REW      |  << / Tune-               |
|  >>/F.FWD    |  >> / Tune+               |
|  Stop       |  Stop / Hold             |
|  Menu      |  Menu / Home            |
|  Up        |  Up                     |
|  D/WLY     |  Red / Netflix / Search |
|  ADD T     |  Green / APP / Repeat   |
|  Left      |  Left                   |
|  OK        |  OK                     |





| Original | Rechange   | Original | Rechange                    |
|----------|------------|----------|-----------------------------|
|          | Right      |          | Right                       |
|          | SP/LP      |          | Picture / Format            |
|          | Index      |          | Info / Angle                |
|          | +          |          | Vol+                        |
|          | Down       |          | Down                        |
|          | Memo       |          | Blue / Prime Video / Random |
|          | Reset      |          | Back / Return               |
|          | Display    |          | Display / Media             |
|          | -          |          | Vol-                        |
|          | A-TR       |          | Text / Goto                 |
|          | CH NO. Set |          | AV / Input / RDS            |
|          | Clock Set  |          | Setup / OPT /               |
|          | Auto Set   |          | Zoom / Size                 |
|          |            |          |                             |
|          |            |          |                             |
|          |            |          |                             |
|          |            |          |                             |
|          |            |          |                             |
|          |            |          |                             |

