 


Original	Rechange
Power AMP	Power
Power Audio	Shift + Power
1	1
2	2
3	3
Disc	Eject / Surround
4	4
5	5
6	6
>=10	Guide / EPG / -/--
7	7
8	8
9	9
0	0
Up	Up
Menu	Menu / Home
Left	Left


Original	Rechange
Select	OK
Right	Right
Down	Down
Display	Display / Media
Band	Smart / List
CH-	CH- / Page-
CH+	CH+ / Page+
Tape 1	Shift + 5
Tape 2	Shift + 4
CD	Shift + 3
Tuner	Shift + 6
MD	Shift + 8
DVD	Shift + 2
Aux	Shift + 7
Phono	Shift + 1
Muting	Mute / Dimmer
Volume-	Vol-

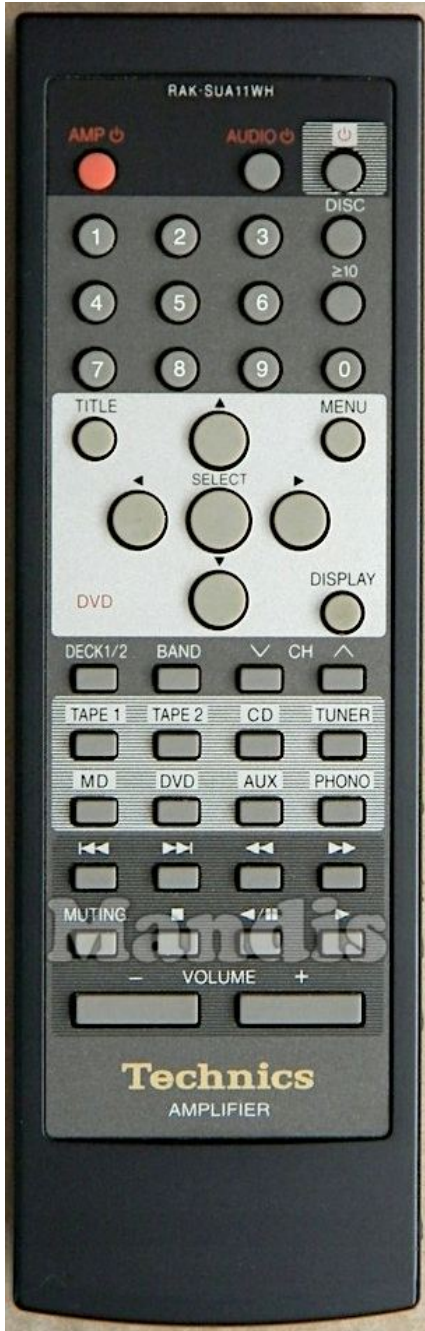



Original	Recharge	Original	Recharge
 Volume+	 Vol+		




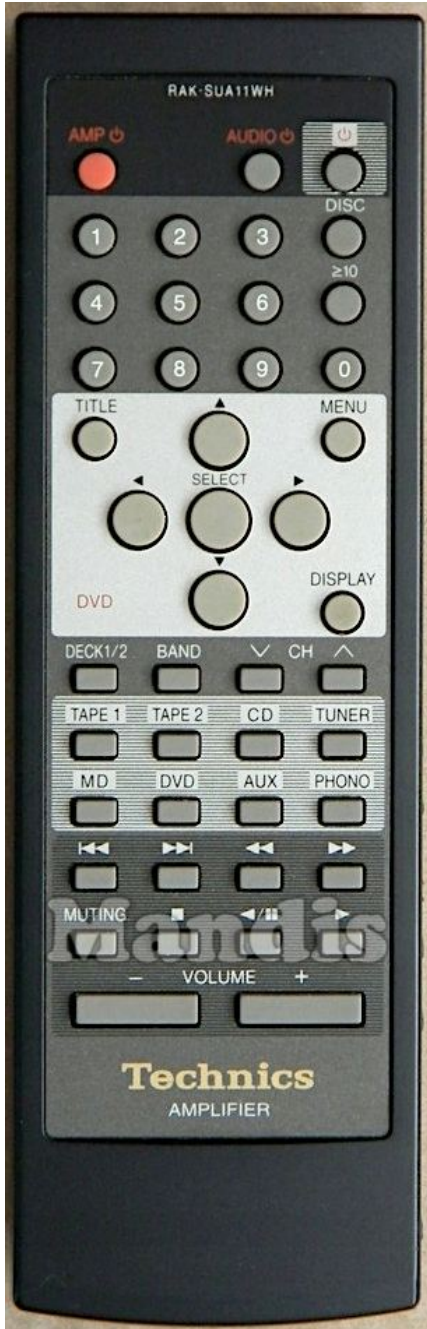 

Original	Rechange
Power DVD	Power
1	1
2	2
3	3
Disc	Eject / Surround
4	4
5	5
6	6
>10	Guide / EPG / -/-
7	7
8	8
9	9
0	0
Up	Up
Menu	Menu / Home
Left	Left
Select	OK

Original	Rechange
Right	Right
Down	Down
Display	Display / Media
Band	Smart / List
CH-	CH- / Page-
CH+	CH+ / Page+
Tape	Shift + 5
CD	Shift + 3
DVD	Shift + 2
I<</<<	I<< / Preset-
>>/>>I	>>I / Preset+
Muting	Mute / Dimmer
Stop	Stop / Hold
Play	Play / Slow
Volume-	Vol-
Volume+	Vol+



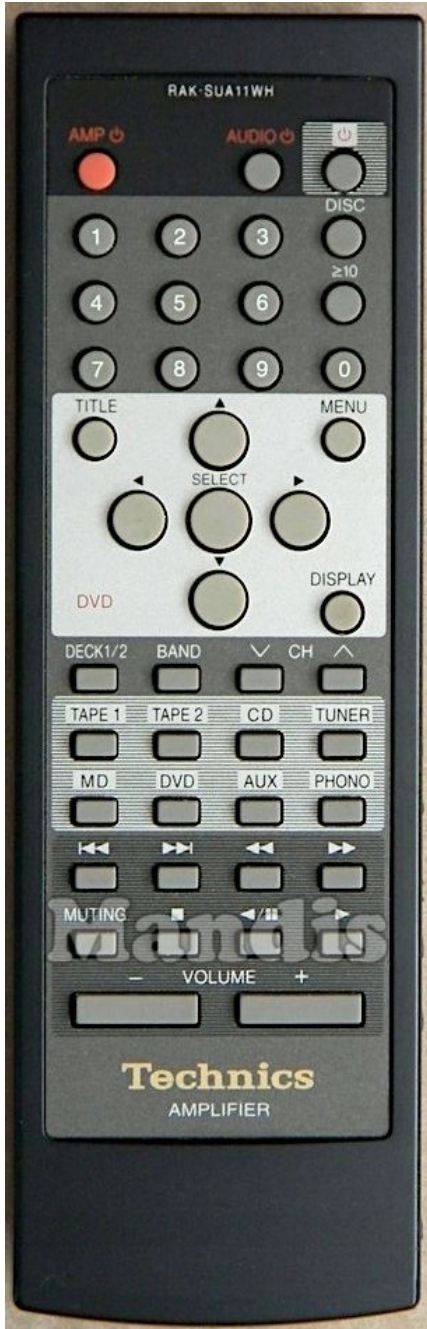 

Original	Recharge
Power CD	Power
1	1
2	2
3	3
Disc	Eject / Surround
4	4
5	5
6	6
>=10	Guide / EPG / -/--
7	7
8	8
9	9
0	0
CD	Shift + 3
TUNER	Shift + 6
I<<	I<< / Preset-
>>I	>>I / Preset+

Original	Recharge
<<	<< / Tune-
>>	>> / Tune+
Muting	Mute / Dimmer
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
Volume-	Vol-
Volume+	Vol+

