





 











 



















 











 

















Original		Rechange		Original		Rechange	
	Power		Power				
	Slow/Still Adjust-		Down				
	Slow/Still Adjust+		Up				
	Audio Monitor		Audio / Lang I/II				
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	X2		Sleep / Timer				
	<		Left				
	>		Right				
	Slow		Shift + Play /				
	<< Search		>> / Tune+				
	Play		Play / Slow				
	Search >>		I<< / Preset-				
	<< Rew		<< / Tune-				
	FF >>		>>I / Preset+				
	Stop		Stop / Hold				



 

 











 







 





 
 




Original		Rechange		Original		Rechange	
	Power		Power				
	Slow/Still Adjust-		Down				
	Slow/Still Adjust+		Up				
	Audio Monitor		Audio / Lang I / II				
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	X2		Sleep / Timer				
	<		Left				
	>		Right				
	Slow		Shift + Play /				
	<< Search		>> / Tune+				
	Play		Play / Slow				
	Search >>		I<< / Preset-				
	<< Rew		<< / Tune-				
	FF >>		>>I / Preset+				
	Stop		Stop / Hold				





Original		Rechange		Original		Rechange	
	Power		Power				
	Slow/Still Adjust-		Down				
	Slow/Still Adjust+		Up				
	Audio Monitor		Audio / Lang I/II				
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	X2		Sleep / Timer				
	<II		Left				
	II>		Right				
	Slow		Shift + Play /				
	<< Search		>> / Tune+				
	Play		Play / Slow				
	Search >>		I<< / Preset-				
	<< Rew		<< / Tune-				
	FF >>		>>I / Preset+				
	Stop		Stop / Hold				

