 

 
 
 
 

 







 

 



 





 
 



 
 

 




 



 
 
 
 

 
 
 

 

 
 
 
 
 

 
 


 






Original		Rechange		Original		Rechange	
	Power		Power		Info		INFO
	Mute		MUTE		Exit		EXIT
	1		1		Up		UP
	2		2		Down		DOWN
	3		3		Right		RIGHT
	4		4		Left		LEFT
	5		5		OK		OK
	6		6		CH+		CH +
	7		7		CH-		CH -
	8		8		Vol+		VOL +
	9		9		Vol-		VOL -
	0		0		Rec		Rec
	Movie		MEDIA		Stop		Stop
	FAV/Repeat		P/C / FAV		Play		Play
	Menu		MENU		Pause		Pause
	Lang		Audio		I<		First
	EPG		-/- / EPG		>I		Last





Original		Recharge		Original		Recharge	
	<</Alt		Rewind				
	>>/List		Fast Forward				
	Red		Red (A)				
	Blue		Blue (D)				
	Green		Green (B)				
	Yellow		Yellow (C)				
	Text		TEXT				
	Tv/Radio		TV/R				
	Audio		OPT+				
	Subt		Subt.				
	Zoom		WIDE				
	Device		SRC				
	Time Shift		V-FOR				
	File		BACK				
	Mosaic		VOD				
	A.Scan/Goto	 + 	Shift + VOD				

