

 


 








 



 






Original	Rechange
 Power	 Power
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 <	  << / Preset-
 Pause	 Pause / Step / Freeze
  >	 >>  / Preset+
 Info	 Info / Angle
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 Titles	 Subtitle / EQ
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home

Original	Rechange
 Left	 Left
 Up	 Up
 Right	 Right
 P +	 CH+ / Page+
 OK	 OK
 P -	 CH- / Page-
 Down	 Down
 P < P	 Smart / List
 Back	 Back / Return
 Guide	 Guide / EPG / -/--
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7



