

 
 


 

 

 

 
 
 


 
 




 


 

 

 
 
 

 
 






 
 


 
 
 

 
 
 
 
 
 
 
 

 
 
 
 
 
 
 

 




Original		Recharge		Original		Recharge	
	Power		Power		6		6
	Tv/TXT		Text		7		7
	Input		AV		8		8
	OK		Ok		9		9
	Up		Up		0		0
	Down		Down		Back		Back
	Right		Right		FAV		Shift + Pre Ch
	Left		Left		Menu		Menu
	Vol+		Vol +		Exit		Exit
	Vol-		Vol -		Nicam/A2		Shift + Guide
	CH+		Ch +		Display		Shift + Info
	CH-		Ch -		Mute		Mute
	1		1		Picture		Format
	2		2		Sound		Dual
	3		3		Sleep		Sleep
	4		4		Subtitle		Subt
	5		5		EPG		Guide





	Original	Rechange	Original	Rechange
	CH/List	 Pre Ch		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Blue/Screen	 Blue		
	Play	 Play		
	Pause	 Pause		
	Stop	 Stop		
	Record	 Rec		
	>>/Size	 >>		
	<</Hold	 <<		
	Cancel	 Shift + Back		
	Reveal/Rep	 Eject		
	I<</Subpage	 D. Menu		
	>>I/Index	 Info		
	List	 List		

