








 

 





 

 







 










| Original   | Rechange   |
|--|--|
|  Power    |  Power        |
|  Mute     |  Mute         |
|  1        |  1            |
|  2        |  2            |
|  3        |  3            |
|  4        |  4            |
|  5        |  5            |
|  6        |  6            |
|  7        |  7            |
|  8       |  8           |
|  9      |  9          |
|  0      |  0          |
|  ASPECT |  Format     |
|  P.C.   |  Pre Ch     |
|  MENU   |  Menu       |
|  SOURCE |  Shift + AV |
|  Up     |  Up         |

| Original  | Rechange   |
|---|--|
|  Right   |  Right            |
|  Down    |  Down             |
|  Left    |  Left             |
|  OK      |  Ok               |
|  Exit    |  Exit             |
|  Display |  Info             |
|  Vol +   |  Vol +            |
|  Vol -   |  Vol -            |
|  CH +    |  Ch +             |
|  CH -   |  Ch -            |
|  Sound |  Dual           |
|  PIC   |  Shift + Format |
|  NICAM |  Media          |
|  SLEEP |  Sleep          |
|  TV    |  Smart          |
|  AV    |  AV             |
|  HDMI  |  Shift + Media  |



