












 







 



 




	Original	Rechange	Original	Rechange
	Power	 Power		
	Mute	 Mute		
	Menu	 Menu		
	Vol+	 Vol +		
	Vol-	 Vol -		
	I<<	 I<<		
	Play / Pause	 Play		
	Play / Pause	 Pause		
	>>I	 >>I		
	Source+	 Up		
	Source-	 Down		
	Mode	 Smart		
	Display	 Info		

