



Original	Rechange	Original	Rechange
Power	Power	Up	Up
16:9 / Wide	Picture / Format	Left	Left
Mute	Mute / Dimmer	OK	OK
1	1	Right	Right
2	2	Down	Down
3	3	Vol +	Vol+
4	4	Menu	Menu / Home
5	5	CH +	CH+ / Page+
6	6	Vol -	Vol-
7	7	Source	AV / Input / RDS
8	8	CH -	CH- / Page-
9	9	Info	Info / Angle
0	0	Sleep	Sleep / Timer
F1	Exit / Cancel / Clear	Recall	Back / Return
[:≡]	D.Menu / Top	L / R	Eject / Surround
Smart S	Sound / Title	Index / Play	Play / Slow
Smart P	Shift + Picture / Format	Index / Play	Display / Media

Original	Rechange	Original	Rechange
Power	Power	Up	Up
16:9 / Wide	Picture / Format	Left	Left
Mute	Mute / Dimmer	OK	OK
1	1	Right	Right
2	2	Down	Down
3	3	Vol +	Vol+
4	4	Menu	Menu / Home
5	5	CH +	CH+ / Page+
6	6	Vol -	Vol-
7	7	Source	AV / Input / RDS
8	8	CH -	CH- / Page-
9	9	Info	Info / Angle
0	0	Sleep	Sleep / Timer
F1	Exit / Cancel / Clear	Recall	Back / Return
[:≡]	D.Menu / Top	L / R	Eject / Surround
Smart S	Sound / Title	Index / Play	Play / Slow
Smart P	Shift + Picture / Format	Index / Play	Display / Media



