







 





 


 

 







 
 
 


Original	Rechange
Power	Power
Open/Close	Eject
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
+10	Guide
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Repeat	Text

Original	Rechange
A-B Repeat	Red
Shuffle	Media
Program	Sleep
Clear	Exit
Goto	Smart
Kodak T.E.	Yellow
Resume	Blue
Tv Mode	TV/R
Display	Info
Slow	Green
Step	Format
P/N	Back
Zoom	Shift + Eject
Setup	Options
Audio	Dual
Sub-T	Subt
Angle	List





Original		Rechange		Original		Rechange	
	Menu		Menu				
	Title		AV				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	Enter		Ok				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	I<<		I<<				
	>>I		>>I				
	<<		<<				
	>>		>>				

