

 





 









 



 







 







 


 














 





 








Original	Rechange
 Standby	 Power
 Mute	 Mute / Dimmer
 Play / Size	 Play / Slow
 Pause / Surpage	 Pause / Step / Freeze
 Stop / Hold	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Pic. Mode	 Picture / Format
 Sleep	 Sleep / Timer
 TV / Radio	 TV/Radio /
 Index	 D.Menu / Top
 Text	 Text / Goto

Original	Rechange
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Recall	 Back / Return
 Vol+	 Vol+
 CH. List	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2





Original	Recharge
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Aspect	 SHIFT +  Shift + Picture / Format
 Home	 SHIFT +  Shift + Menu /
 Reveal	 SHIFT +  Shift + Back / Return
 Mouse	 SHIFT +  Shift + Smart / List

Original	Recharge
 IE	 +  Shift + Display / Media

