













 







 





 

 

 



 



 



 







 


































 






 




 










Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	Nicam/A2		Shift + Audio / Lang I/II		1		1
	Sleep		Sleep / Timer		2		2
	Aspect		Zoom / Size		3		3
	USB/CR		Shift + 8		4		4
	Display		Display / Media		5		5
	Auto		Smart / List		6		6
	PMode		Picture / Format		7		7
	SMode		Sound / Title		8		8
	DTV		D.Menu / Top		9		9
	Source		AV / Input / RDS		0		0
	Up		Up		-/--		Guide / EPG / -/--
	Left		Left		Back		Back / Return
	Enter		OK		CH+		CH+ / Page+
	Right		Right		Info		Info / Angle
	Down		Down		Audio		Audio / Lang I/II





Original	Recharge	Original	Recharge
	Vol+		Vol+
	CH-		CH- / Page-
	FAV		Fav / Marker / PC
	Tv/Radio		TV/Radio /
	Vol-		Vol-
	Text		Text / Goto
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop/EPG		Stop / Hold
	Subtitle		Subtitle / EQ
	Rec/Hold		Rec / Rec Mode
	<</Index		<< / Tune-
	>>/Size		>> / Tune+
	l<</Reveal		l<< / Preset-
	>>l/Sbpage		>>l / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat

Original	Recharge	Original	Recharge
	Yellow		Yellow / YouTube / Repeat
	Cyan		Blue / Prime Video / Random

