
 

 
 







Original		Rechange		Original		Rechange	
	Standby		Power		Aspect		Format
	Eject / Auto		Eject		Audio		Dual
	Mute		Mute		Display		Info
	1		1		Ch +		Ch +
	2		2		Ch -		Ch -
	3		3		Up		Up
	4		4		Right		Right
	5		5		Down		Down
	6		6		Left		Left
	7		7		Enter		Ok
	8		8		Menu		Menu
	9		9		DVD Setup / Exit		Exit
	0		0		DVD Setup		Options
	-/--		Shift + Guide		Input		AV
	Recall		Back		P.Mode		Shift + Format
	Vol+		Vol +		S.Mode		Shift + Dual
	Vol-		Vol -		Sleep		Sleep





Original	Rechange
 Fav	 Pre Ch
 Fav -	 Shift + Ch -
 Fav +	 Shift + Ch +
 EPG	 Guide
 Angle / Text	 Text
 Zoom / Hold	 Shift + Eject
 TV / Radio	 TV/R
 Subtitle	 Subt
 D.Menu / Index	 D. Menu
 Title / Size	 3D
 D.Disp / Reveal	 List
 Goto / Subpage	 Smart
 Slow / Media	 Media
 Play / Pause	 Play
 Pause	 Pause
 <<	 <<
 >>	 >>

Original	Rechange
 Rec	 Rec
 Stop	 Stop
 I<<	 I<<
 >>I	 >>I
 Red / Prog	 Red
 Green / Intro	 Green
 Yellow / Repeat	 Yellow
 Blue / A-B	 Blue

