





 



 






 

 
 


 






 

 


 
 
 
 
 
 
 
 
 
 
 
 


 



 




Original	Rechange	Original	Rechange
 Power	 Power	 Green	 Green
 1	 1	 Yellow/FAV+	 Yellow
 2	 2	 Blue	 Blue
 3	 3	 White/FAV-	 Media
 4	 4	 Pause	 Pause
 5	 5	 Mute	 Mute
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 PR+	 Ch +
 9	 9	 PR-	 Ch -
 0	 0	 Up	 Up
 Info	 Info	 Down	 Down
 UHF	 AV	 Right	 Right
 Audio	 Dual	 Left	 Left
 Text	 Text	 OK	 Ok
 Sat/TV	 Subt	 Vol+	 Vol +
 Red	 Red	 Vol-	 Vol -

Original	Rechange	Original	Rechange
 Green	 Green	 TV	 TV
 Yellow/FAV+	 Yellow	 DVD	 DVD
 Blue	 Blue	 SAT	 SAT
 White/FAV-	 Media	 AUX	 AUX
 Pause	 Pause	 MUTE	 MUTE
 Mute	 Mute	 SHIFT	 SHIFT
 Menu	 Menu	 PLAY MODE	 PLAY MODE
 Exit	 Exit	 REC MODE	 REC MODE
 PR+	 Ch +	 PAUSE	 PAUSE
 PR-	 Ch -	 DISC NAV	 DISC NAV
 Up	 Up	 SOUND	 SOUND
 Down	 Down	 AD	 AD
 Right	 Right	 SETTINGS	 SETTINGS
 Left	 Left	 LIST	 LIST
 OK	 Ok	 DUAL	 DUAL
 Vol+	 Vol +	 SUBT	 SUBT
 Vol-	 Vol -	 OPT	 OPT
		 PROG	 PROG
		 SEARCH	 SEARCH
		 PICTURE	 PICTURE
		 ECO	 ECO
		 SLEEP	 SLEEP
		 TV/R	 TV/R
		 FORMAT	 FORMAT
		 3D	 3D
		 TIMER	 TIMER
		 E-MANUAL	 E-MANUAL
		 REPEAT	 REPEAT
		 ZOOM	 ZOOM
		 TEXT	 TEXT
		 AV	 AV
		 TOP MENU	 TOP MENU
		 MENU	 MENU
		 CLEAR	 CLEAR
		 EXIT	 EXIT
		 PR+	 PR+
		 PR-	 PR-
		 Up	 Up
		 Down	 Down
		 Right	 Right
		 Left	 Left
		 OK	 OK
		 Vol+	 Vol +
		 Vol-	 Vol -
		 HOME	 HOME
		 SMART	 SMART
		 APP	 APP
		 MEDIA	 MEDIA
		 CH+	 CH+
		 CH-	 CH-
		 1	 1
		 2	 2
		 3	 3
		 4	 4
		 5	 5
		 6	 6
		 7	 7
		 8	 8
		 9	 9
		 GUIDE	 GUIDE
		 0	 0
		 PRE-CH	 PRE-CH
		 A	 A
		 B	 B
		 C	 C
		 D	 D



