













Original	Rechange
 Tv/Radio	 TV/Radio /
 Power	 Power
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Media	 Display / Media
 Lang.	 Audio / Lang I/II
 SUB	 Subtitle / EQ
 Guide	 Guide / EPG / -/--
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right

Original	Rechange
 FAV.	 Fav / Marker / PC
 Down	 Down
 X/Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 i	 Info / Angle
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow/Timer	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4





Original		Rechange		Original		Rechange	
5 jkl	5		5				
6 mno	6		6				
7 pqrs	7		7				
8 tuv	8		8				
9 wxyz	9		9				
TTX	TTX		Text / Goto				
0 sep	0		0				
CH↵	CH Back		Back / Return				

