 


 
 






 
 




 



 




 




 
 



 




 




 


 
 



 















 









Original		Rechange		Original		Rechange	
	Power		Power		AUX		Yellow
			Options		C/S		Exit
			Dual		0		0
			Down		1		1
	TV		TV/R		2		2
			Left		3		3
			Smart		4		4
			Sleep		5		5
			Right		6		6
			Up		7		7
	SOL		Red		8		8
	FA		Green		9		9
	Mute		Mute		P+		Ch +
	Vol-		Vol -		P-		Ch -
	Vol+		Vol +		N / E		Ok
	ME		Media		≡?		Play
	AV		AV				Pause





Original		Recharge		Original		Recharge	
	≡ □		Stop				
			Rec				
	≡ □		Text				
	≡ □		<<				
	≡ ▶		>>				
	≡ □		<<				
	≡ ■		>>				
	≡ i		Info				

