







 











 




 












Original	Recharge
 On/Off	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide / EPG / -/--
 Recall	 Shift + Back / Return
 Picture	 Picture / Format
 Sound	 Sound / Title
 Source	 AV / Input / RDS

Original	Recharge
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Back	 Back / Return
 FAV	 Fav / Marker / PC
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Info	 Info / Angle
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 TV	 TV/Radio /





Original	Recharge
YouTube	Yellow / YouTube / Repeat
Netflix	Red / Netflix / Search
Smart	Smart / List
Rec	Rec / Rec Mode
I<<	I<< / Preset-
>>I	>>I / Preset+
Stop	Stop / Hold
Rec.List	Setup / OPT /
<<	<< / Tune-
>>	>> / Tune+
Play	Play / Slow
Pause	Pause / Step / Freeze
Red/Goto	+ Red / Netflix /
Green/A-B	Green / APP / Repeat
Yellow/3D	+ Shift + Yellow / YouTube /
Blue/Repeat	Blue / Prime Video / Random

Original	Recharge

