 









































 


Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Menu	 Menu / Home
 0	 0
 Exit	 Exit / Cancel / Clear
 Up	 Up
 CH+	 CH+ / Page+
 Vol-	 Vol-

Original	Rechange
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Right	 Right
 CH-	 CH- / Page-
 Down	 Down
 EPG	 Guide / EPG / -/--
 Red	 Red / Netflix / Search
 TTX	 Text / Goto
 Blue	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Subtitle	 Subtitle / EQ
 i	 Info / Angle
 FAV	 Fav / Marker / PC
 Tv/Radio	 TV/Radio /





	Original	Recharge
	Video	 +  Shift + 4
	Scan	 AV / Input / RDS
	Record	 Rec / Rec Mode
	Device	 Smart / List
	File	 Display / Media
	Zoom	 Zoom / Size
	Prev	 I<< / Preset-
	Next	 >>I / Preset+
	Roll	 Sound / Title
	Play	 Play / Slow
	Pause	 Pause / Step / Freeze
	<<	 << / Tune-
	>>	 >> / Tune+

Original	Recharge

