




 



 

 









 







 

 
 




 








 


 




 











Original		Rechange		Original		Rechange	
	Power		Power		4		4
	Mute		Mute / Dimmer		5		5
	Play		Play / Slow		6		6
	Pause [ /≡]		Pause / Step / Freeze		7		7
	Stop/[≡+]		Stop / Hold		8		8
	Rec/[≡◆]		Rec / Rec Mode		9		9
	<</[≡o]		<< / Tune-		*		Setup / OPT /
	<</[≡i]		<< / Preset-		0		0
	>> /[≡?]		>>  / Preset+		[→]		Shift + Right
	>> /[≡x]		>> / Tune+		Up		Up
	Info		Info / Angle		Left		Left
	O)/II/Audio		Audio / Lang I/II		OK		OK
	[≡]		Text / Goto		Right		Right
	←/<x]		Shift + Left		Down		Down
	1		1		Netflix		Shift + Red / Netflix /
	2		2		YouTube		Shift + Yellow / YouTube /
	3		3		Vol+		Vol+





Original	Recharge	Original	Recharge
Home/Source	Menu / Home		
P+	CH+ / Page+		
Vol-	Vol-		
P-	CH- / Page-		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
EPG	Guide / EPG / -/--		
List	Smart / List		
Q.Menu	D.Menu / Top		





Original		Rechange		Original		Rechange	
	Power		Power		4		4
	Mute		Mute / Dimmer		5		5
	Play		Play / Slow		6		6
	Pause/[≡]		Pause / Step / Freeze		7		7
	Stop/[≡+]		Stop / Hold		8		8
	Rec/[≡◆]		Rec / Rec Mode		9		9
	<</[≡o]		<< / Tune-		*		Setup / OPT /
	<</[≡i]		<< / Preset-		0		0
	>> /[≡?]		>>  / Preset+		[→]	+	Shift + Right
	>> /[≡x]		>> / Tune+		Up		Up
	Info		Info / Angle		Left		Left
	OI/II/Audio		Audio / Lang I/II		OK		OK
	[≡]		Text / Goto		Right		Right
	←/<x]	+	Shift + Left		Down		Down
	1		1		Netflix	+	Shift + Red / Netflix /
	2		2		You Tube	+	Shift + Yellow / YouTube /
	3		3		Vol+		Vol+





Original		Rechange	
	Home / Source		Menu / Home
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	EPG		Guide / EPG / -/--
	List		Smart / List
	Q.Menu		D.Menu / Top

Original		Rechange	

