








 



 







 



 




 



 







 



 







 







 



 





Original		Rechange		Original		Rechange	
<<		<< / Tune-		8		8	
>>		>> / Tune+		9		9	
I<<		I<< / Preset-		[≡?]/Source		Eject / Surround	
>>I		>>I / Preset+		0		0	
Play		Play / Slow		O)/I/II/Audio		Audio / Lang I/II	
Pause		Pause / Step / Freeze		Menu		Menu / Home	
Stop		Stop / Hold		Exit		Exit / Cancel / Clear	
	Power		Power		Up		Up
	[≡i]/Info		Info / Angle		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Down		Down
	3		3		CH+		CH+ / Page+
	4		4		Index		Display / Media
	5		5		Vol+		Vol+
	6		6		CH-		CH- / Page-
	7		7		List		Smart / List





Original		Recharge		Original	Recharge
	Vol-		Vol-		
	♥		Fav / Marker / PC		
	Sleep		Sleep / Timer		
	EPG		Guide / EPG / -/--		
	Recall		Back / Return		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	[≡]		Text / Goto		
	[≡+]/Still		Zoom / Size		
	Radio		TV/Radio /		
	[≡♦]/[++]		Picture / Format		
	[≡x]		Setup / OPT /		
	[≡o]/Subtitle		Subtitle / EQ		
	DMP		D.Menu / Top		
	Rec		Rec / Rec Mode		

