









 











 



 







 



 



 
 


 



 


 


















Original		Rechange		Original		Rechange	
	Power		Power		3D		Shift + 3
	1		1		?		Info / Angle
	2		2		@		D.Menu / Top
	3		3		Menu		Menu / Home
	4		4		Up		Up
	5		5		←		Back / Return
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		Tools		Setup / OPT /
	FAV		Fav / Marker / PC		Down		Down
	0		0		Guide/Home		Guide / EPG / -/--
	TXT		Text / Goto		Guide/Home		Smart / List
	Red		Red / Netflix / Search		Vol+		Vol+
	Green		Green / APP / Repeat		Source		AV / Input / RDS
	Yellow		Yellow / YouTube / Repeat		PR+		CH+ / Page+
	Blue		Blue / Prime Video / Random		Vol-		Vol-





Original	Recharge
	Mute / Dimmer
	CH- / Page-
	I<< / Preset-
	>>I / Preset+
<< icon"/>	<< / Tune-
	>> / Tune+
	Rec / Rec Mode
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Display / Media
	Audio / Lang I/II
	Subtitle / EQ

Original	Recharge

