






 



 
 
 


 
 

 




 


 



 
 






 







 

 


 


 



 
 
 

 



 




Original	Rechange	Original	Rechange
 Power	 Power	 Setup	 Options
 Open/Close	 Eject	 << FR/SR	 <<
 1	 1	 >> FF/SF	 >>
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 Sel	 Ok
 7	 7	 I<<	 I<<
 8	 8	 Display	 Info
 9	 9	 >>I	 >>I
 0	 0	 Title	 List
 Clear	 Exit	 Menu	 Menu
 PBC	 Guide	 Marker	 TV/R
 Stop/Return	 Stop	 Angle	 Red
 Play/Pause	 Play	 Subtitle	 Subt
 >I</Step	 Pause	 Audio	 Dual





Original	Recharge
ZOOM Zoom	SHIFT + ZOOM Shift + Eject
3D SOUND 3D Sound	ECO 3D 3D
REPEAT Repeat	REPEAT TEXT Text
PROGRAM Program	PROG SLEEP Sleep
SHUFFLE Shuffle	APP MEDIA Media
DIGEST Digest	C Yellow
A-B A-B	SHIFT + PLAY MODE Shift + Play
VOLUME + Vol+	+ VOL Vol +
VOLUME - Vol-	VOL - Vol -

Original	Recharge

